



(1) <u>Coolant Pipe:</u>	LR005188	(9) <u>Hose, Exp. Tank Overflow:</u>	PCH501910
(2) <u>Hose, Heater Feed:</u>	4680301	(10) <u>Hose, Engine to Radiator:</u>	PCH501740
(3) <u>Hose:</u>	4726370	(11) <u>Hose, Radiator to Res. Bleed:</u>	PCH502341
(4) <u>Pipe, Cooling System Bleed:</u>	PCH501990	(12) <u>Hose, Engine to Radiator:</u>	PCH501720
(5) <u>Clip:</u>	PYC500260	(13) <u>Hose, Heater Return:</u>	4680304
(6) <u>Hose, Engine Coolant Valve:</u>	PCH501510	(14) <u>Hose, Reservoir to Pump:</u>	PCH501940
(7) <u>Hose, Radiator to Thermostat:</u>	PCH501310	(15) <u>Hose Assembly:</u>	PCH502080
(8) <u>Hose, Engine Coolant Valve:</u>	PCH501950	(16) <u>Hose, Oil Cooler to Coolant Rail:</u>	PCH501920