



- |      |                                  |                                   |
|------|----------------------------------|-----------------------------------|
| (1)  | <u>Bolt:</u>                     | UYP500030                         |
| (2)  | <u>Sensor, Coolant Temp:</u>     | 4603183                           |
| (3)  | <u>Water Outlet:</u>             | 4680290                           |
| (4)  | <u>Thermostat Housing:</u>       | '06-'07 4653276<br>'08 LR007605   |
| (5)  | <u>Thermostat:</u>               | '06 PCP500050<br>'07-'08 LR005765 |
| (6)  | <u>Seal Ring:</u>                | 4362513                           |
| (7)  | <u>Bolt, Thermostat Housing:</u> | 4467593                           |
| (8)  | <u>Bracket, Knock Sensor:</u>    | 4653269                           |
| (9)  | <u>Seal Ring:</u>                | 4413478                           |
| (10) | <u>Thermostat Pipe Assy:</u>     | '06-'07 LR005767<br>'08 LR007604  |
| (11) | <u>Sensor Retaining Clip:</u>    | 4097377                           |
| (12) | <u>Clamp, Spring Type:</u>       | 4653270                           |
| (13) | <u>Bolt, Water Pump:</u>         | 4537592                           |
| (14) | <u>Water Pump Assembly:</u>      | 4575902                           |
| (15) | <u>Gasket, Water Pump:</u>       | 4575903                           |
| (16) | <u>L-Pipe:</u>                   | LR004056                          |
| (17) | <u>Seal Ring:</u>                | 4024557                           |
| (18) | <u>Outlet Housing:</u>           | 4629192                           |
| (19) | <u>Thermostat Pipe Assy:</u>     | '06-'07 LR005766<br>'08 LR007603  |