

**Fuel System**

Accelerator Cable 3.5 NTC4842  
 Accelerator Cable 3.9 NTC6723 through '89  
 Accelerator Cable 3.9, 4.2 ANR5327 through '94  
 Accelerator Pedal Rubber 11H1781L



Fuel Pump PRC8318 through '90  
 PRC9409 '91-'93  
 Ferrule (olive), fuel line NRC9771  
 Nut, fuel line union NRC9770  
 ESR3926 '94-'95  
 Pump Sealing Ring NTC5859 '91-'95  
 Pump Relay AFU2913L

sealing ring WGQ000020 req.  
 up to RA642682: seal ring NTC5859 required  
 2 required when replacing pump  
 2 required when replacing pump  
 link lead STC3683 and seal ring NTC5859 required  
 rubber grommet seals pump to tank: req. with PRC9409, ESR3926

Fuel Tank ESR2000 through '90  
 WFE500740 '91 on: to PA638156 (late '93) use pipe ESR1056  
 Sender Unit PRC8822 '87-'90

Recommended to also replace the cradle, ESR2204K  
 '91 on: to PA638156 (late '93) use pipe ESR1056

Fuel Tank Cap TKC3976L through '90  
 WLD100820 '91-on



Locking Fuel Cap LRNAGCAPL '91& later only  
 Injector ETC6264 through '90  
 ERR722 '91-on

Sold in 'eaches', 8 total  
 Sold in 'eaches', 8 total  
 2 per injector

Injector Seal RTC5679  
 Fuel Pressure Regulator ETC8494  
 Throttle Position Indicator ETC8495  
 Fuel Temperature Sensor ETC6661  
 Stepper Motor ERR5199  
 Air Flow Meter ERR5198  
 Air intake hose ESR1611L

a.k.a. 'potentiometer'  
 a.k.a. 'air control valve'



**Exhaust System**

**3.5 through '88**

Intermediate Pipe  
 Intermediate Silencer  
 Tail Pipe and Silencer  
 Head Pipe Gasket ETC4524  
 Oxygen Sensor ERR6729  
 Intermediate Flange Olive CRC4579L

3.5 exhaust pipes special order only  
 one per side  
 one per side, should be replaced in pairs  
 donut seal, between head pipes and intermediate pipe

**Exhaust System '89 Only**

Tail Pipe and Resonator NTC5579  
 Rubber Hanger NTC5582  
 Head Pipe Gasket ETC4524  
 Intermediate Flange Olive CRC4579L  
 Oxygen Sensor ERR6729

2 required  
 2 required  
 donut seal, between head pipes and intermediate pipe  
 one per side, should be replaced in pairs

**Exhaust System '90 On**

Muffler and Tail Pipe ESR1053  
 ESR1053  
 Rubber Hanger NTC5582  
 Head Pipe Gasket ETC4524  
 Intermediate Flange Olive CRC4579L  
 Oxygen Sensor ERR6729

ESR101 bracket through '91  
 3.9, 4.2 from '92  
 3 required  
 2 required  
 donut seal, between head pipes and intermediate pipe  
 2 required should be replaced in pairs

