



Series III Clutch slave cylinder, Throw out Bearing & Linkage

Clutch Slave Cylinder & Linkage, Series II & IIA

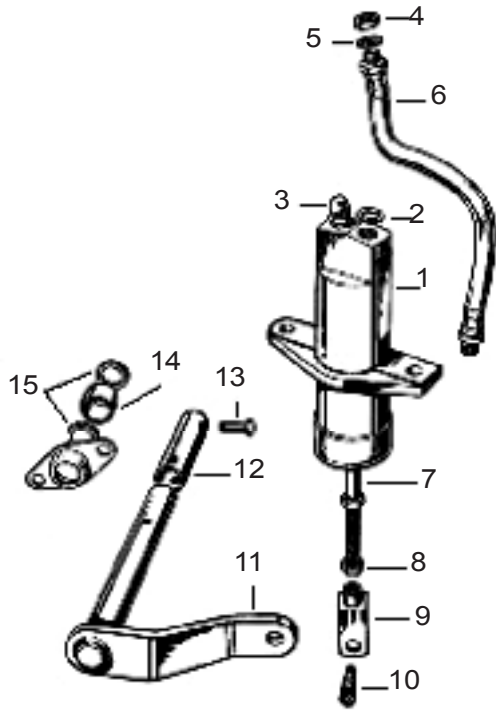

1	Slave cylinder (Ser. II & IIA)	266694G, 266694
	Rebuild kit	8G8600L
2	Washer, flex hose	233220
3	Bleed screw	556508
4	Nut for hose	254852
5	Washer, flex hose	233220
6	Hose, flexible, II & IIA through '68	RTC3386
	Hose, flexible IIA '69 - '71	RTC4425
7	Push rod	537601
8	Lock nut (2 req)	NH605041L
9	Clevis for push rod	275199
10	Clevis fixing pin	216421
11	Operating lever	537603
12	Connecting tube	561661
13	Pin for connecting tube (2 req)	536803
14	Spherical bush, bronze	90217984
15	Felt ring (2 req)	217985

Rubber boot Seals bell housing cross shaft opening
 Boot for cross shaft (Ser. II, IIA) 553262

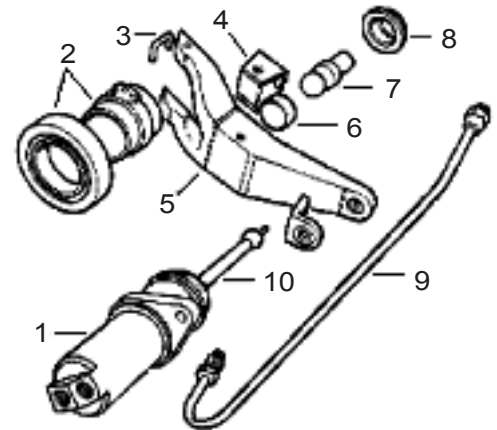

1	Clutch slave cylinder	591231
	Rebuild kit	8G8600L
	Bleed screw	556508
	Cap for bleed screw nipple	594091
2	Throw out bearing	FTC5200
3	Plastic staple	576203
4	Retainer	571163
5	Clutch release lever	576137
6	Bush	571161
7	Fulcrum	576720
8	Retaining collar	571164
9	Steel line	NRC3287
10	Push rod	576751

Clutch Hydraulic lines

Series II, IIA

Reservoir to master cyl.	562978
For use with replacement fluid reservoir	588710
(replacement early style reservoir 582980)	
Master cyl. to flex hose, early	570091
Master cyl. to flex hose, '69 on	NRC4222
Hose, flexible, II & IIA through '68	RTC3386
Hose, flexible IIA '69 - '71	RTC4425
Washer, flex hose	233220
Nut for hose	254852

Series III

Master cylinder to flex hose	NRC4222
Hose, flexible	RTC5940
Washer, flex hose	233220
Flex tube to slave cyl.	NRC3287