


### Series III Fresh Air Heater




Foam seal, heater box to fire wall 346701  
Blower to heater box hose 346999

### Series III heater hoses

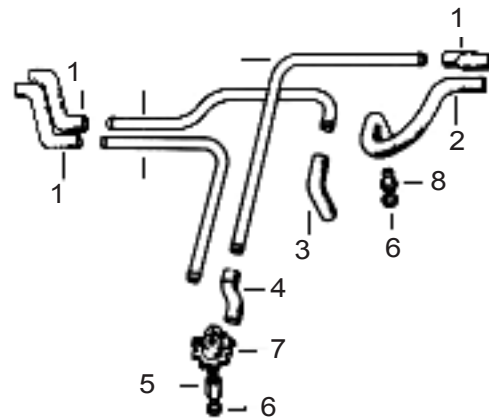

### Heater controls, Series III Fresh air heater

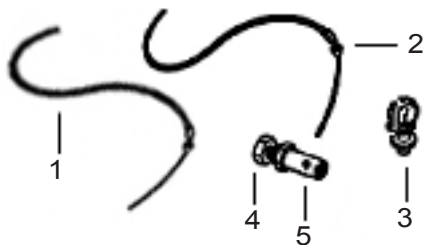

### Metal pipes

All metal pipes are NLA

### Hoses

1	Pipe to heater ( 2 req LHD, 1 req RHD)	577292
2	Return hose, RHD	594632
3	Return pipe to hose fitting, #8, LHD	594636
4	Valve to pipe	594629

### Valve & fittings

5	Adaptor for valve	594622
6	Washer, sealing	213960
7	Valve	90577299
8	Hose fitting, return to block	624091

### Heater controls

	Switch, for heater motor	1H9077L
1	Cable assy. for coolant flow valve	347940
2	Cable assy. for air flow valve	BTR8736
3	Clamp, cable to housing	NLA
4	Pinch bolt assy.	257307/37H1856L
5	Trunnion, cable clamp	566902



HELP LINE: 661-257-8634  
24 HOUR FAX: 661-257-9765



Check our web site for our **Specials**  
[www.britishpacific.com](http://www.britishpacific.com)